

HOW TO USE YOUR COFFEE MAKER

Fill the water tank at the back of the machine with fresh, cold water.

Plug in the coffee machine and switch it on (the on/off switch is on the left-hand side of the machine).

The control panel at the top of the machine will flash on and off while the water is heating: this takes 45-60 seconds.

When the machine is ready, the control panel will be illuminated (and not blinking) with a blue light at the top.

Place a cup or a mug underneath the spout of the machine.

Open the handle at the top of the machine and insert a coffee capsule.

Close the handle firmly.

Select one of the three icons (small to large, left to right):

- 'Short' espresso (25ml)
- Standard espresso (40ml)
- Lungo (110ml)

Once the coffee has brewed, eject the used capsule by raising the handle at the top of the machine.

Turn off the power at the side.

For full instructions on how to use your coffee maker, [click here](#).