


HOW TO USE YOUR OVEN & MICROWAVE

Your electric oven can be used as a convection (conventional) oven, as a microwave or as a grill.

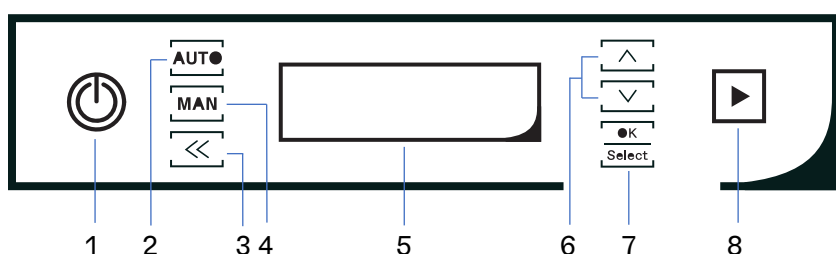

Control Panel

1. On / Off
2. Automatic: for scrolling through the automatic functions
3. Back: to return to the previous menu setting
4. Manual: for scrolling through the manual functions
5. Display panel
6. Navigation buttons: to change settings or values
7. Confirmation button
8. Start: to begin cooking.
NB: if you press the Start button when the over is switched off, it will activate the “quick start” microwave (see below)

For ease of use, these instructions explain how to operate the most commonly used functions of the oven. All of these functions are manual rather than automatic.

For information on how to use the full range of options, [click here](#).

Using the Microwave

Quick Start

Simply place your dish in the oven and press  .
The microwave will start cooking at 900w for 30 seconds. You can press  multiple times to increase the cooking time by 30-second increments.

Other Microwave Functions

Use the MAN button [4] to scroll through to the microwave icon, which looks like this:



Press OK [7] to confirm the selection.

The power level will start flashing in the display window [5].

Use the navigation buttons [6] to select the power level. You can choose from the following options:

- 900w for heating ready meals, drinks and food with a high water content
- 700w for cooking vegetables
- 600w for cooking meat and fish
- 500w for cooking sauces
- 350w for melting butter or chocolate
- 160w for defrosting frozen foods or softening butter and cheese
- 90w for softening ice cream

Press OK [7] to confirm the selection.

The clock will now start flashing in the display window [5].

Use the navigation buttons [6] to confirm how long this dish should cook in the microwave. (Follow the instructions on the food packaging or in the recipe book.)

Press OK [7] to confirm the selection.

Finally, press  to start the microwave.

Press  at any time to pause the microwave.

Using the Convection (Fan) Oven

Use the MAN button [4] to scroll through to the oven icon, which looks like this:



Press OK [7] to confirm the selection.

The temperature (in degrees centigrade) will start flashing in the display window [5]. Use the navigation buttons [6] to increase or decrease the temperature, then press OK [7] to confirm.

Use the navigation buttons to [6] to set the timer for the oven, if required.

Press OK [7] to confirm.

Finally, press  to start the convection oven.

Using the Grill

Use the MAN button [4] to scroll through to the grill icon, which looks like this:



Press OK [7] to confirm the selection.

The temperature (in degrees centigrade) will start flashing in the display window [5]. Use the navigation buttons [6] to increase or decrease the temperature, then press OK [7] to confirm.

Use the navigation buttons to [6] to set the timer, if required.

Press OK [7] to confirm.

Finally, press  to start the grill.

Place the item for grilling on the wire shelf and place the shelf on the turntable so that food items are closer to the grill.